


BRITPART FITTING INSTRUCTIONS

Rear Shock Absorber





The quality parts for Land Rovers

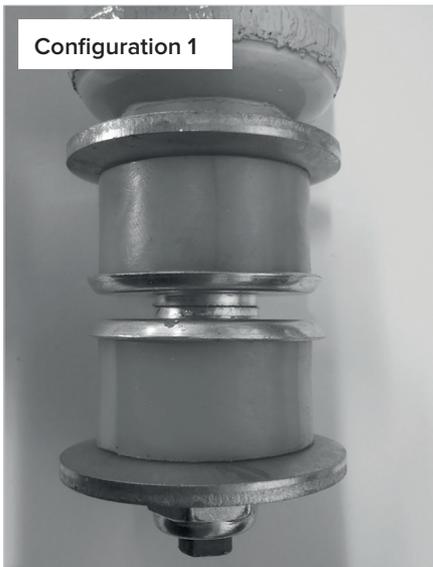

Pictures show the correct bush and washer configuration to the type of axle the shock absorber is being fitted to.

Make sure to use check straps if vehicle is intended for off-road use where high levels of articulation may occur.

If off-roading vehicles with axle bush cups fitted, we recommend removing cups and use configuration 1 set up to allow for extra articulation.

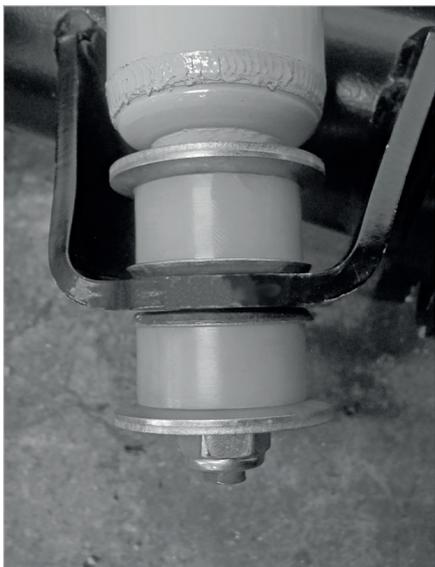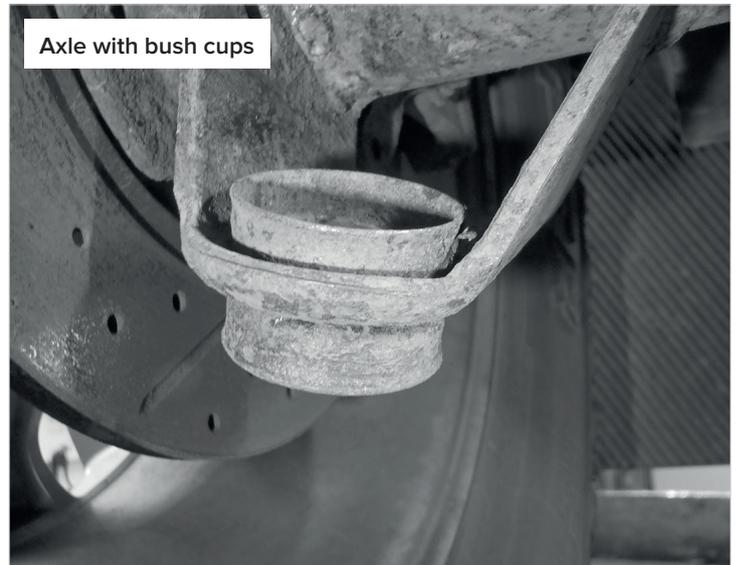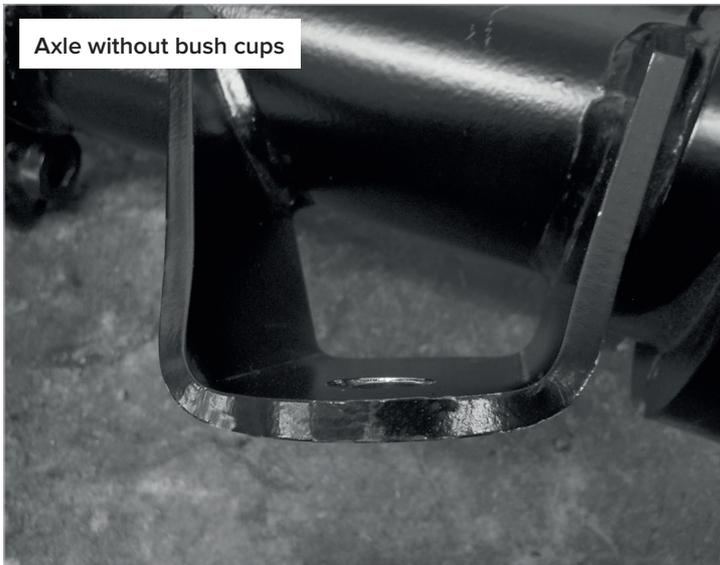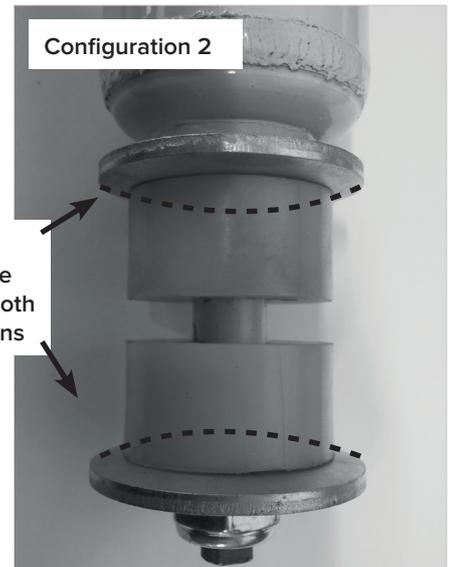

Britpart

The Grove, Craven Arms,
Shropshire, SY7 8DA United Kingdom
www.britpart.com

VR. 1.

Disclaimer

These fitting instructions are intended for general guidance only. No responsibility will be accepted for damage to persons, property, equipment or vehicles caused during or arising from the fitting or using of this product. Fitting this item to your vehicle may constitute a vehicle modification and therefore we strongly recommend that you check the product complies with local laws and legislation and always inform the vehicle's insurance company accordingly.