


Important

Fitting Instructions For Individual Folding Seats

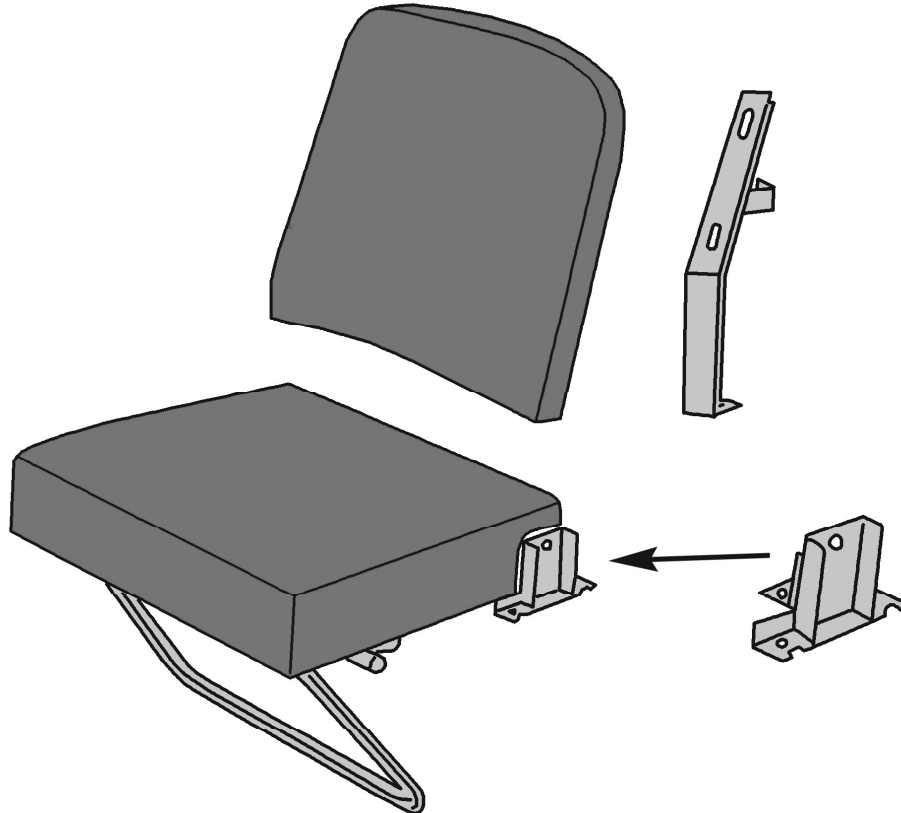

1. Attach swivel brackets to rear of seat with bolts provided.*
It is important that the brackets are folded into the position shown.
2. Fit angled brackets to seat back with bolts provided. Nuts are located inside back.
3. Place backrest in position required and drill inner corner of wheelarch to take bottom of angled brackets. Fix with nuts and bolts. Remove brackets from backrest and drill galvanised capping on body side to enable bracket to be fitted with self tapping screws. Re-fit backrest.
4. Place seat base in position on wheelarch with the tubular leg into the angle formed by the floor and wheelarch, making sure to leave sufficient gap to allow the seat base to fold flush with the backrest. Drill holes in the wheelarch and bolt brackets through.

*When inserting bolts into the base of the seat it is **very important** that these are gently engaged into the thread of the captive nut. Any undue force or pressure could dislodge the nut.